



# Original Instruction manual

## Depth spade MAULWURF

Manufacturer:  
HMF Hermeler Maschinenbau GmbH  
Dipl. Wirt. Ing. Thomas Hermeler  
Lohmannstraße 4  
D-48336 Sassenberg-Füchtorf  
Phone: +49 (0) 54 26 / 53 84  
WhatsApp: +49 (0) 54 26 / 53 84  
E-Mail: [sales@hmf-hermeler.de](mailto:sales@hmf-hermeler.de)  
Website: [www.hmf-hermeler.de](http://www.hmf-hermeler.de)

## Table of contents

	Page
1. Introduction	3
2. Content	3
3. General remarks	3
3.1 Special attention	3
3.2 Description of the type plate	4
4. Safety instructions	5
4.1 Safety and accident prevention regulations	8
4.2 Notes on road safety	8
5. Before commissioning	9
6. Working and Setting	9
7. Notes on misuse of the machine	11
8. Volume level	11
9. Maintenance and care	11

# 1. Introduction

This instruction manual is valid for the depth spade MAULWURF. It is made for the persons who work with this machine and gives you advices for the use, the adjusting and the operation of the machine MAULWURF.

Make this instruction manual available to all persons who work with the machine. Texts and pictures are kept neutral as far as possible. Attention is drawn to differences by means of picture headings or text notes.

Manufacturer:

HMF Hermeler Maschinenbau GmbH

Dipl. Wirt. Ing. Thomas Hermeler

Lohmannstraße 4

D-48336 Sassenberg-Füchtorf

Phone: +49 (0) 54 26 / 53 84

WhatsApp: +49 (0) 54 26 / 53 84

E-Mail: [sales@hmf-hermeler.de](mailto:sales@hmf-hermeler.de)

Website: [www.hmf-hermeler.de](http://www.hmf-hermeler.de)

## 2. Content

Read this instruction manual carefully and completely before working with the depth spade. Follow the advice for the correct care and maintenance of your machine and you will achieve constant operational readiness and a long service life for your machine.

## 3. General remarks

### 3.1 Special attention

All people who would use, care or control the depth spade MAULWURF have to read, comprehend and pay attention to the instructions of this instruction manual to avoid danger.

Especially pay attention to the "Security and accident prevention instructions". The use of spare parts, accessories and additional devices which do not come original from HMF and are not checked and released from HMF, constructively given qualities of the HMF machine or her functional ability negatively change and thereby affect the active and/or passive safe driving as well as working security (accident protection), is not permitted.

For damages, in this respect by the use of Non-HMF-Original-Spare Parts, accessories and additional devices every liability is excluded from HMF.

Technical designations, measures and weights are non-binding. We reserve ourselves changes in the course of the technical development and mistakes. In front, behind, right and left is valid always in direction of the traffic.

### 3.2 Description of the type plate

The serial number of the machine, the type and the year of manufacture are stamped on the type plate. This type plate is normally located on the front right of the machine. Front, rear, right and left always apply in the direction of travel.

In the event of a spare parts order, please provide us with the following information:

1. Type
2. Year of manufacture
3. Serial number



When ordering spare parts, photos of the defective part or machine are often helpful. The following communication channels can be used for this purpose:

WhatsApp: +49 (0) 54 26 / 53 84

Email: [sales@hmf-hermeler.de](mailto:sales@hmf-hermeler.de)

## 4. Safety instructions

Please read and observe these operating instructions and the safety instructions before you start working with the machine.

### Labelling of warnings and hazards

In these operating instructions we have marked all passages concerning your safety and the safety of the machine with the following symbols. Pass on all safety instructions to other users as well!



#### **Danger!**

Marking of instructions which, if not followed, pose a risk to the life and limb of the operator or his fellow human beings and measures to avoid the danger



#### **Attention!**

Marking of instructions which, if not followed, may cause damage to the machine and measures to avoid danger to the machine.



#### **Note!**

Marking of indications that enable a more effective and economical use of the machine



#### **Environment!**




Labelling of instructions which, if not followed, pose a risk to the environment.

There is an environmental hazard if environmentally hazardous substances (e.g. oils, foils, etc.) are not handled properly and/or disposed of.

The warning and information signs attached to the machine provide important information for safe operation. Observance of this information is for your own safety.

In general:

- a) Strictly follow warning signs and information signs!
- b) Pass on all safety instructions to other users as well!
- c) Keep warning signs and information signs in good condition, replace if necessary!

	<p><b>Before commissioning, read the operating instructions and observe the safety instructions!</b></p> <p><b>For maintenance and repair work, switch off the engine and remove the ignition key.!</b></p>
	<p><b>When operating the power lift, do not stand in the lifting range stop!</b></p> <p><b>It is forbidden to stand between the tractor and the implement during operation.!</b></p>
	<p><b>Do not touch machine parts until they have come to a complete standstill.</b></p> <p><b>During operation and when the engine is running do not open or remove the guard. Never reach into the rotating parts.</b></p> <p><b>Do not stand near the rotating parts or touch moving machine parts! Wait until they have come to a complete standstill!</b></p>



**There is a risk of crushing!**



**Caution! Danger from ejecting parts when the machine is running.**

**Keep a safe distance!**



**Do not stay within the swivel range of the implements!**

## 4.1. Safety and accident prevention regulations

1. In addition to the information in this instruction manual, observe the general safety and accident prevention regulations.
2. When using public traffic routes, observe the respective regulations!
3. Before starting work, familiarise yourself with all the actuating devices and their function before starting work. It is too late to do this while driving!
4. Before starting the engine, make sure that no gear is engaged and that all guards are in place and in protective position.
5. Before starting, check the immediate area (children!). Ensure sufficient visibility. Sound the horn for safety!
6. The rider's clothing should be tight-fitting. Loose clothing should be avoided!
7. When mounting and dismounting the machine, it is forbidden to stand between the tractor and the machine while the diesel engine is running, as danger of crushing.
8. When hitching and unhitching the hydraulic connections, switch off the tractor's diesel engine. Switch off the diesel engine of the tractor.
9. Only mount and dismount the depth spade on level, solid ground, and park it.

## 4.2. Notes on road safety


- The permissible axle loads of the tractor and the permissible tyre load capacity of the tractor must not be exceeded by the attachment of the depth spade.
- When hitching to the tractor's three-point linkage, the lower links must be locked according to the tractor manufacturer in order to prevent the tractor-implement combination from rocking during road travel.
- The requirements and instructions of the information sheet for attachments from the road traffic regulations must be observed
- Before driving on public roads, especially after a field operation, it is necessary to prevent dirt or adhering soil from falling onto the roads. In the event of the road is contaminated with dirt or soil, the danger area must be marked and marked and cleaned immediately.

## 5. Before commissioning

To take full advantage of your new machine, please read and follow this instruction manual before using your machine. Before using the machine, check that it has been delivered complete. Remove the packaging carefully and completely. Familiarise yourself with the technical instruments. Lubricate all grease nipples and grease all moving parts with grease or oil. Please always observe the safety instructions. We must reject warranty claims resulting from improper handling!




## 6. Working and Setting

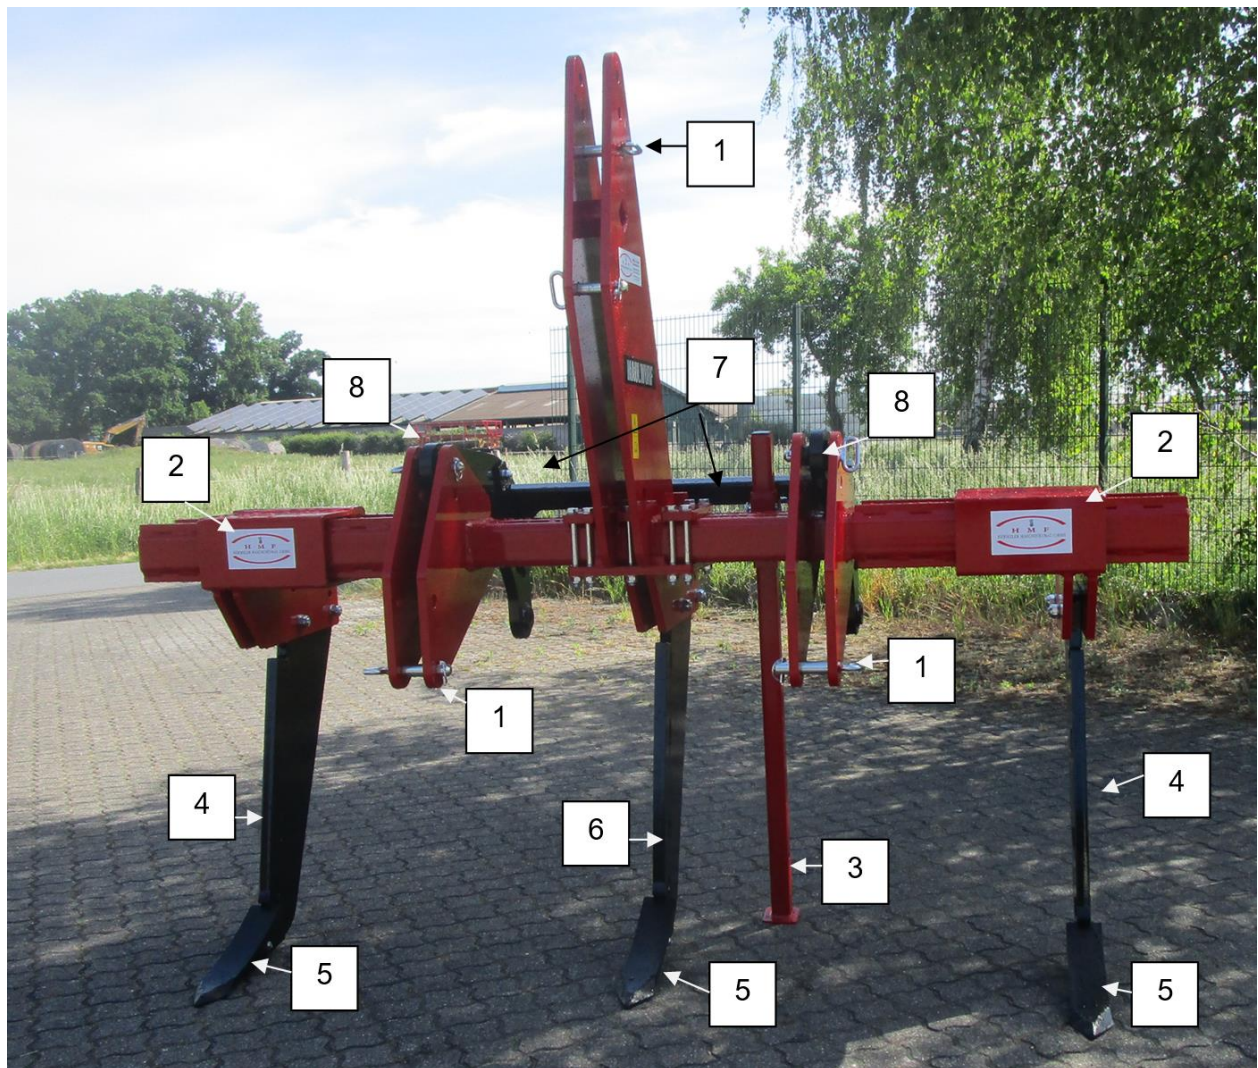

- (1) Three-point hitch
- (3) Support foot
- (5) Coulter
- (7) Adapter (optional accessory)

- (2) Sliding piece
- (4) Depth chisel
- (6) Third depth chisel (optional accessory)
- (8) Bracket for adapter

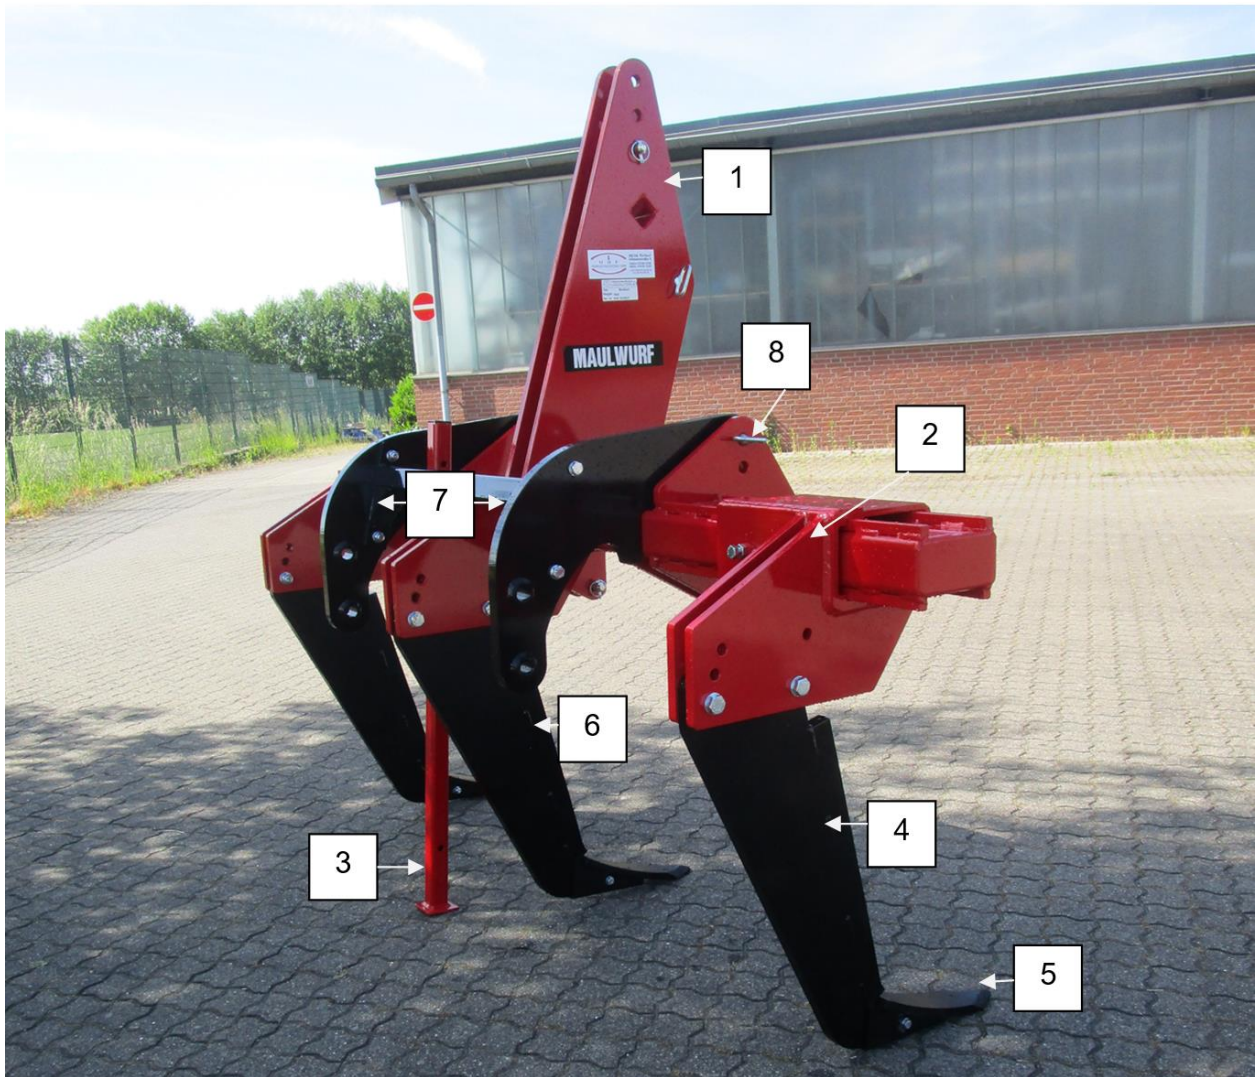

The MAULWOLF deep spade is connected to the tractor's three-point lever (1).

The distance between the two deep chisels (4) is infinitely adjustable. To do this, loosen the two screws on the rear of the sliding piece (2). Then slide the sliding piece into the desired position and tighten the screws again.

The coulter (5) on the underside of the deep chisel (4) is replaceable. It is secured with screws.

If you want to park the MAULWOLF depth spade after finishing work, you should lower the machine using the tractor hydraulics.

Lower the support foot (3) and secure it with the bolts. Please ensure that you only park the MAULWOLF depth spade on level ground.

The MAULWOLF depth spade can be combined with the IGEL, ILTIS and DACHS asparagus cultivators or with the CHAMÄLEON multi-purpose hoe.

An adapter (7) is available as an optional accessory for this purpose. The adapter must be secured to the special brackets (6) on the left and right with two bolts. The adapter can be attached to the desired combination machine in the same way. The connection is therefore vertically movable.

A combination of deep spade and asparagus cultivator or multi-purpose hoe economises work processes.

## **7. Notes on misuse of the machine**

No persons may be carried on the machine.

## **8. Volume level**

The MAULWURF depth spade itself does not generate any significant noise. Noise is only emitted by the tractor.

## **9. Maintenance and care**

**All rotating parts must be greased regularly (every 20 operating hours).**

**As displaced lubricant can get into the feed, soil or groundwater during relubrication, we generally recommend the use of biodegradable lubricants!**